


Part #10-203 Skid Plate Instructions

USE SOME FORM OF THREAD LOCKING COMPOUND ON THE FASTENERS. #242 BLUE LOC-TITE IS RECOMMENDED.

Arrange the brackets as shown in the photo.

This Skid Plate uses two slightly longer brackets for the front of the skid plate and the two shorter ones are used as the rear brackets.

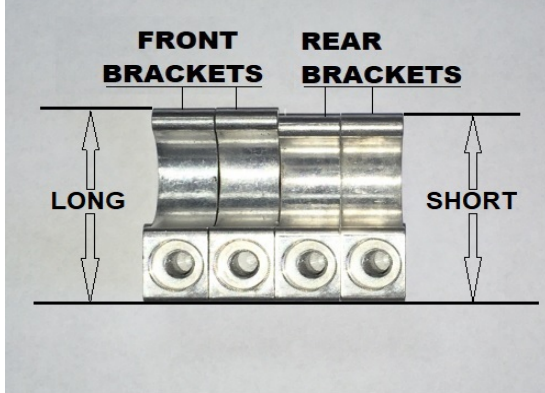

Install one of the rear brackets loosely on the skid plate and then hook the bracket in its position over the frame rail. Place the remaining rear bracket into position on the frame rail / skid plate and thread both mount bolts in finger tight for now. Place each front bracket into position and thread both mount bolts in finger tight for now. Confirm the skid plate is properly positioned and press the skid plate up against the frame rails while tightening all four bolts to 9-12 ft/lbs.