

Part # 18-072 Radiator Brace Instructions


Note-On some models it will be necessary to remove the black rubber piece affixed to the outer edge of each radiator. Removing them will allow the radiator braces to fit flat against the outer edge of the radiators.

LEFT-Remove the radiator shroud, gas tank mounting bolt and the top louver mounting bolt. Position the radiator brace into place making sure that it goes over (NOT BEHIND) the radiator hose. Install the top louver mounting bolt and gas tank bolt. Confirm radiator braces is centered up and then tighten both bolts to the OEM spec. Install the radiator shroud and tighten the shroud bolts to the OEM spec.

RIGHT-Remove the radiator shroud, gas tank mounting bolt and the top louver mounting bolt. Position the radiator brace into place. Install the top louver mounting bolt and gas tank bolt. Confirm radiator braces is centered up and then tighten both bolts to the OEM spec. Install the radiator shroud and tighten the shroud bolts to the OEM spec.



LEFT SIDE

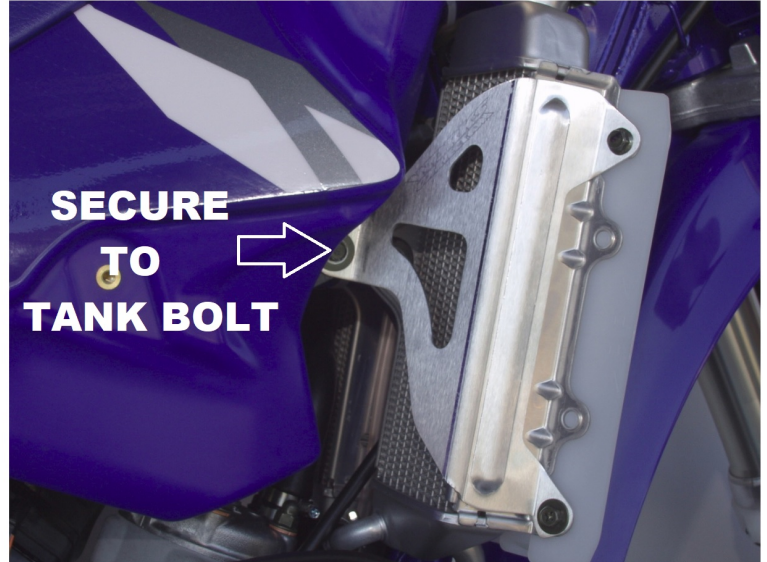

RIGHT SIDE