

Part # 10-615 Skid Plate Instructions

IMPORTANT: Use some form of thread locking compound on all the bolts.

We recommend using Blue Loc-Tite #242.



Remove the stock skid plate.

By hand install the two isolators into the two slotted holes in the front of the Skid Plate.

DO NOT use tools when performing this step to avoid damaging the isolators-i.e. no screwdrivers!

Place a nylon washer on each front bolt.

Insert the bolts w/nylon washers into the isolators.

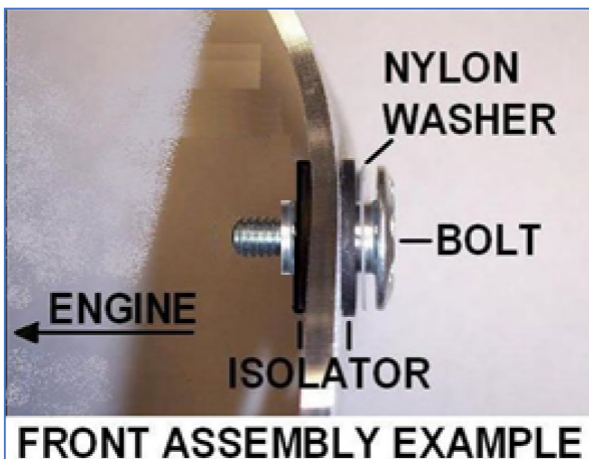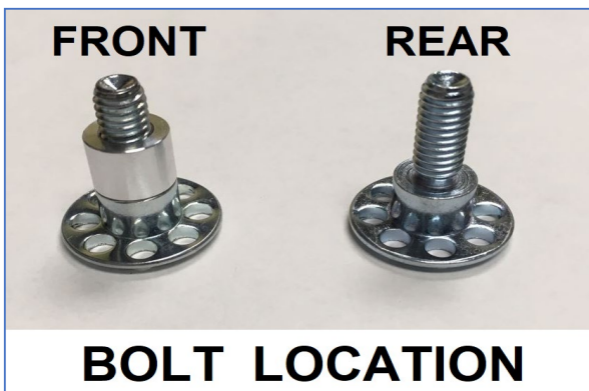

Thread a rear bolt/bracket 5-6 turns onto the Skid Plate. Position the new Skid Plate into its proper location by hooking the bracket over the frame rail. Slip the remaining rear bracket over the frame rail and thread the bolt in 5-6 turns.

Thread the two front bolts into the stock front mounts a few turns. Apply upward pressure on the Skid Plate and tighten the front bolts first and then the rear bolts to 9-12 ft/lbs.

QUESTIONS ?

CONTACT US AT (530) 642-9488

