

Part #10-626 Skid Plate Instructions


IMPORTANT: Use some form of thread locking compound on all fasteners. #242 Loc-Tite is best.

Install the rubber isolators into the two slotted holes located on the front of the Skid Plate.

DO NOT use tools when performing this step to avoid damaging the isolators-i.e. no screwdrivers!

Place a nylon washer on each front RIMS bolt.

Insert RIMS bolts w/nylon washers into the isolators.

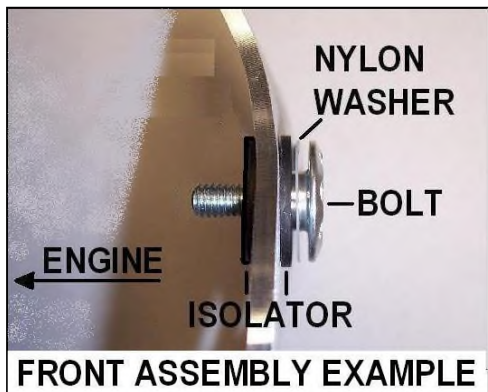

Carefully hold the Skid Plate up to the frame. Thread the 6mm bolt, with washer, into the the rear mount 2-3 turns. Thread the two RIMS bolts in 2-3 turns.

Confirm the Skid Plate is centered on the frame rails. Apply upward pressure on the Skid Plate and then torque the RIMS bolts to 9-12 ft/lbs and then the rear bolt to 9-12 ft/lbs.

NOTE-AFTER TORQUING THE RIMS BOLTS SOME DISTORTION OF THE ISOLATORS IS NORMAL.